

FOREO

LUNA™ mini


FULL USER MANUAL

CLEANSE DEEPLY FOR CLEARER, HEALTHIER-LOOKING SKIN

Congratulations on taking the first step towards flawlessly beautiful skin by acquiring the LUNA™ mini T-Sonic™ facial-cleansing system. Before you begin to enjoy all the benefits of sophisticated skincare technology in the comfort of your home, please take a few moments to carefully read the instructions in this manual.

LUNA™ mini OVERVIEW

The LUNA™ mini marks a revolution in facial cleansing, combining FOREO's groundbreaking T-Sonic™ pulsations with an innovative silicone brush design for a deeper and gentler clean. When channeled through smooth, silicone touch-points, T-Sonic™ pulsations remove blemish-causing impurities significantly more effectively than washing by hand, leaving skin clearer and brighter. Deep cleansing unblocks pores and reduces their appearance, refining and smoothing your skin's texture.

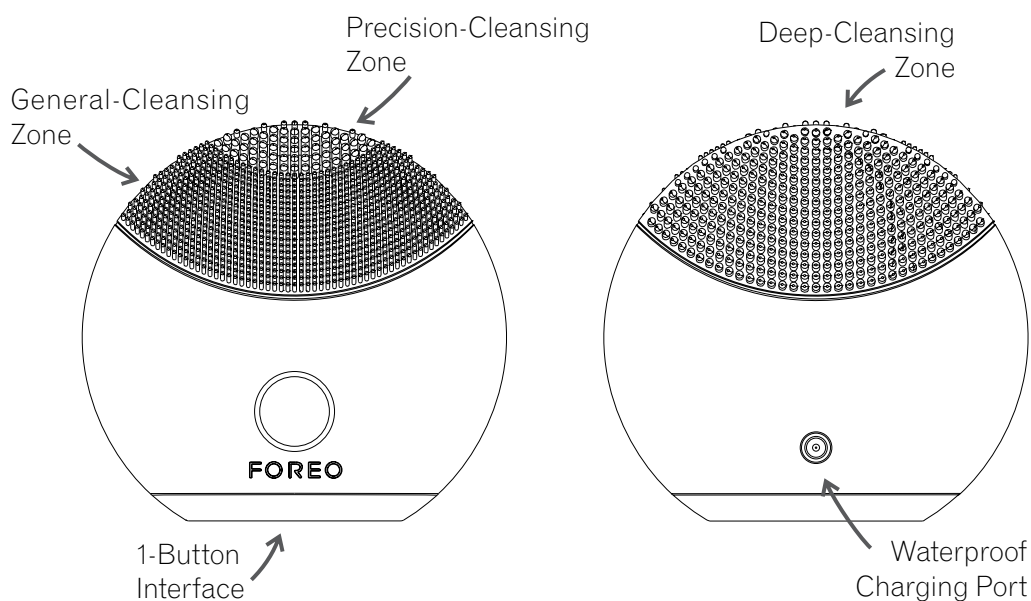

USING YOUR LUNA™ mini

The LUNA™ mini's dual brush surfaces are divided into 3 distinct zones. One side of the device has a series of thinner touch points for gentle cleansing of normal or sensitive skin, with thicker touch points grouped at the top of the brush for precision cleansing of hard-to-reach areas. The reverse side includes only thicker touch points, channeling pulsations more directly for the deeper cleansing of oily skin. We recommend cleansing with the LUNA™ mini for 1 minute every morning and evening.

The LUNA™ mini's cleansing intensity is adjustable for comfort:

1. Press the center button once to turn on your LUNA™ mini. When activated, it will be in high-intensity Cleansing Mode.
2. Press the center button again to put the device in low-intensity Cleansing Mode.
3. Press the center button once more to deactivate your LUNA™ mini.

The individual stages of FOREO's cleansing routine are described below. After each stage of this simple, cleansing procedure, the LUNA™ mini's indicator will flash, prompting you to move on to the next area of your face.


CLEANSING MODE

T-Sonic™ pulsations help to unclog pores of dirt, oil and makeup residue, and remove dead skin cells.

Try spending around 15 seconds cleansing each zone of your face; after this interval the LUNA™ mini's indicator will flash and pulsations will pause momentarily as a reminder.



1. Remove all makeup, then dampen your face and apply your regular cleansing product. Wet the LUNA™ mini's brush surface.

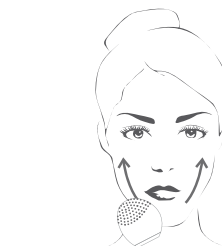

2. Turn on your LUNA™ mini by pressing the center button once, activating the high-intensity Cleansing Mode. Start cleansing your chin, move along your jaw to your ear using gentle upward strokes, then continue higher to cleanse the whole cheek.



3. Change to the other side of your face and repeat step 2.




4. Then, starting from the center of your forehead, cleanse the entire region with gentle outward strokes to both sides.
5. Cleanse one side of the nose by gently gliding the LUNA™ mini up and down, then change to the other side. We recommend activating the LUNA™ mini's low-intensity Cleansing Mode by pressing the center button a second time before delicately cleansing the under-eye region using outward strokes.

After 1 minute, the LUNA™ mini's indicator will begin to emit a steady glow and you will feel the pulsations pause 3 times in quick succession. Rinse your face to complete the 1-minute cleansing routine. Please note that to prevent overuse, the LUNA™ mini will automatically switch itself off after 3 minutes.

CHARGING

- Insert the USB cable's DC connector into the LUNA™ mini's charging port.
- Plug the other end of the cable into the matching socket of a USB mains adaptor; alternatively, you can connect the LUNA™ mini to a USB socket on your computer. The LUNA™ mini's LED will flash repeatedly to indicate the battery is charging. When it is fully charged (after approximately 1 hour), the LED will emit a steady glow.
- When the battery is running low, the LED on your LUNA™ mini will emit a blinking white light.

Only use the charging cable supplied by FOREO with your LUNA™ mini. Always charge the LUNA™ mini before its first use, do not use the device while charging and do not charge for more than 24 hours.

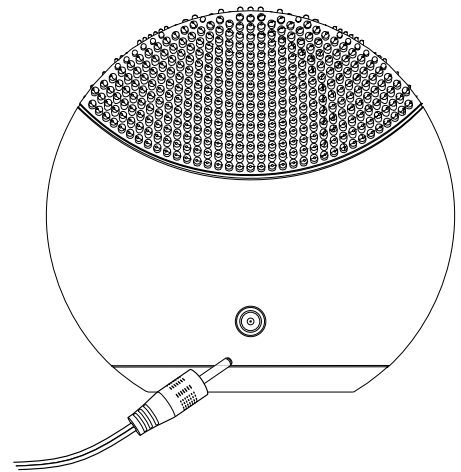

CLEANING, STORAGE AND SAFETY

The life span of your LUNA™ mini will be greatly increased with proper maintenance and care.

Always clean the LUNA™ mini thoroughly after use. Wash the brush surfaces with water and soap, rinse with clean water and pat dry with a lint-free cloth or towel. Never use cleaning products containing alcohol, petrol or acetone, as they may irritate the skin.

Avoid using clay-based, silicone-based or grainy cleansers, exfoliators or scrubs, as they may damage the LUNA™ mini's soft silicone touch points.

Avoid leaving your LUNA™ mini in direct sunlight and never expose it to extreme heat or boiling water.

For reasons of hygiene, we do not recommend sharing your LUNA™ mini with anyone else.

Cleansing with the LUNA™ mini should be comfortable – if you experience discomfort, discontinue use immediately and consult a physician. If you have a skin condition, please consult a dermatologist before use. Exercise particular care when cleansing the under-eye regions and do not bring the device into contact with the eyelids or eyes themselves.

Close supervision is necessary when this device is used by, on, or near children. Never use the device or charging cable if they are damaged. When charging, make sure the USB mains adaptor is dry, and do not charge the LUNA™ mini in any location where it or the USB charger may become immersed in water. Use this device only for its intended use as described in this manual.

Given the efficiency of the FOREO cleansing routine, we recommend that you do not use the LUNA™ mini for more than 3 minutes at a time.

TROUBLESHOOTING

LED does not pulse when charger is connected?

- Battery is fully charged, ready for up to 300 full cleansing routines.
- Battery is drained and will require several minutes to acknowledge charging cable.
- Charging cable is not properly connected. Check USB charger and charging port.

The LUNA™ mini does not activate when the center button is pressed?

- Battery is empty. Recharge your LUNA™ mini.

The LUNA™ mini cannot be switched off and/or interface button does not respond?

- Microprocessor is temporarily malfunctioning. Connect the charging cable to restore function to normal.

The LUNA™ mini's silicone surfaces have degraded to a sticky or bubbly texture?

- Discontinue use. Silicone is highly durable, but degrades under certain conditions – consult this manual's Cleaning, Storage and Safety section for how to prevent this.

If you experience any other problems with your LUNA™ mini, or if you have any questions regarding its operation, please visit the Customer Care section of www.foreo.com and fill in the **Help Desk** form.

FOREO 2-YEAR LIMITED WARRANTY AND 10-YEAR QUALITY GUARANTEE

FOREO warrants this device for a period of TWO (2) YEARS after the original date of purchase, against defects due to faulty workmanship or materials. If you discover a defect and notify FOREO during the 2-year warranty period, FOREO will, at its discretion, replace the device free of charge.

The warranty covers working parts that affect the device's function. It does NOT cover purely cosmetic deterioration caused by fair wear and tear or damage caused by accident, misuse or neglect. Any attempt to open or disassemble the device (or its accessories) will void the warranty.

For any warranty claim, reasonable evidence must be provided that the date of the claim is within the warranty period. For this reason, please keep your original purchase receipt for the duration of the warranty period.

To claim your warranty, you must first register and log in to your account on www.foreo.com, then select the option to make a warranty claim. You will be sent a Return Merchandise Authorization (RMA) number which should be returned with the FOREO product to your nearest FOREO office. Shipping costs are non-refundable. This undertaking is in addition to your statutory rights as a consumer and does not affect those rights in any way.

As a continuation of the terms of FOREO's TWO (2) Year Limited Warranty, FOREO's TEN (10) Year Quality Guarantee makes owners eligible to purchase a new device from www.foreo.com for 50% of the listed price should a manufacturing defect be discovered in this time. See the Customer Care section of www.foreo.com for full terms and conditions.

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems).

The crossed-out dustbin symbol indicates that this device should not be treated as household waste, but rather be brought to the appropriate collection point for recycling of electrical and electronic equipment. By ensuring this device is disposed of correctly, you will help prevent the potential negative consequences for the environment and human health which could be caused by inappropriate waste handling of the product. The recycling of materials will also help conserve natural resources.

For more information about the recycling of your device, please contact your local household waste disposal service or your place of purchase.



SPECIFICATIONS

MATERIALS:	Body-safe silicone & ABS
COLOR:	Magenta/Petal Pink/Turquoise Blue/Purple/Cool Gray
SIZE:	75 x 80 x 28.5 mm
WEIGHT:	67 g
BATTERY:	Li-ion 200 mAh 3.7 V
CHARGING:	60 min
USAGE:	up to 300 uses
STANDBY:	90 days
FREQUENCY:	125 Hz
MAX NOISE LEVEL:	50 dB
INTERFACE:	1-button

Disclaimer: Users of this device use it at their own risk. Neither FOREO nor its retailers assume any responsibility or liability for any injuries or damages, physical or otherwise, resulting, directly or indirectly, from the use of this device.

Model may be changed for improvements without notice.

©2013 FOREO AB. ALL RIGHTS RESERVED.

IMPORTER AND DISTRIBUTOR IN EU: FOREO AB, BIRGER JARLSGATAN 22, 114 34 STOCKHOLM, SWEDEN

IMPORTER AND DISTRIBUTOR IN US: FOREO INC., 3565 S. LAS VEGAS BLVD. #159, LAS VEGAS, NV 89109, USA

DESIGNED AND DEVELOPED BY FOREO SWEDEN